

ESI2500iER-EFI wiring diagram

ECU connectors function

NO.	Function	NO.	Function
1	Ground	10	Fault Signal
2	Loading signal	11	Step Motor
3	MAP Sensor Power	12	Step Motor
4	MAP Sensor Signal	13	Step Motor
5	Oxygen Sensor Signal	14	Step Motor
6	Temperature Sensor Signal	15	Relay Control
7	Ignition Sensor	16	
8	Low Oil Shutdown	17	Injector Control
9	Ignition Sensor	18	POWER

