


ENERGY STORM

ES-2000 PORTABLE GENERATOR

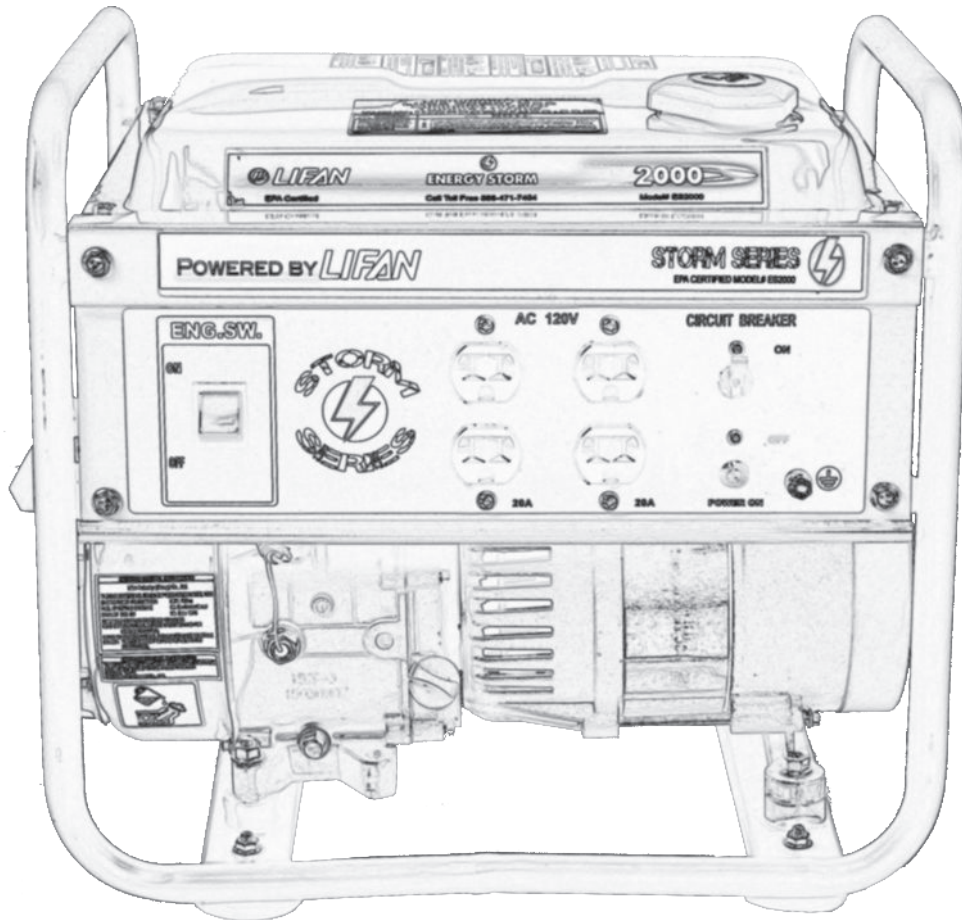


**LIFAN
POWER
USA**

2205 Industrial Park Road
Van Buren, AR
72956

www.lifanpowerusa.com
(866) 471-7464



LIFAN POWER USA

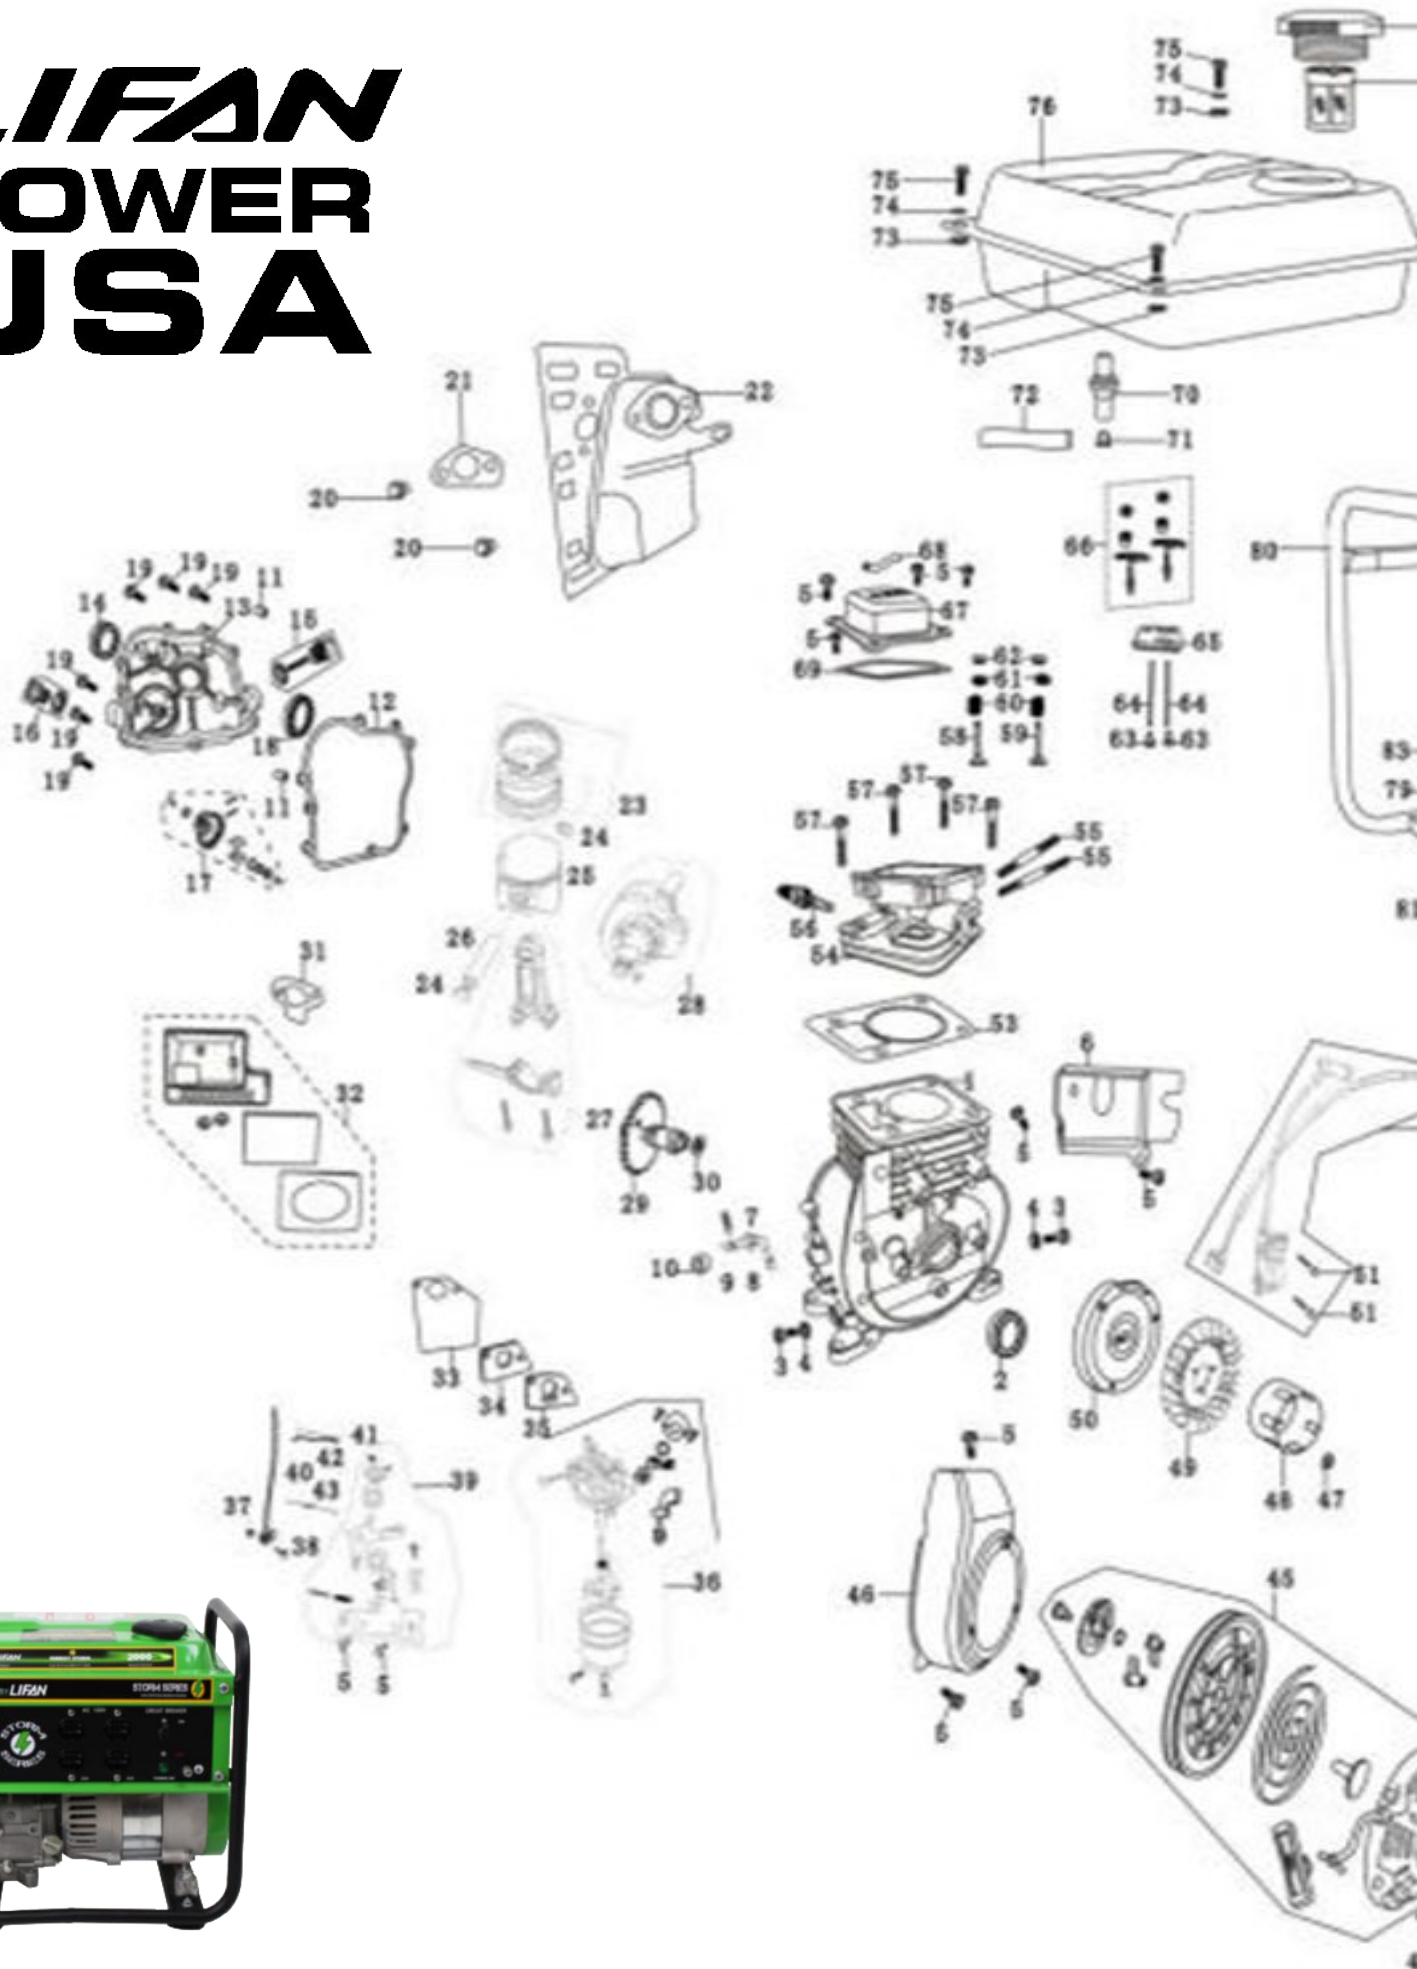

78

77

75
74
73

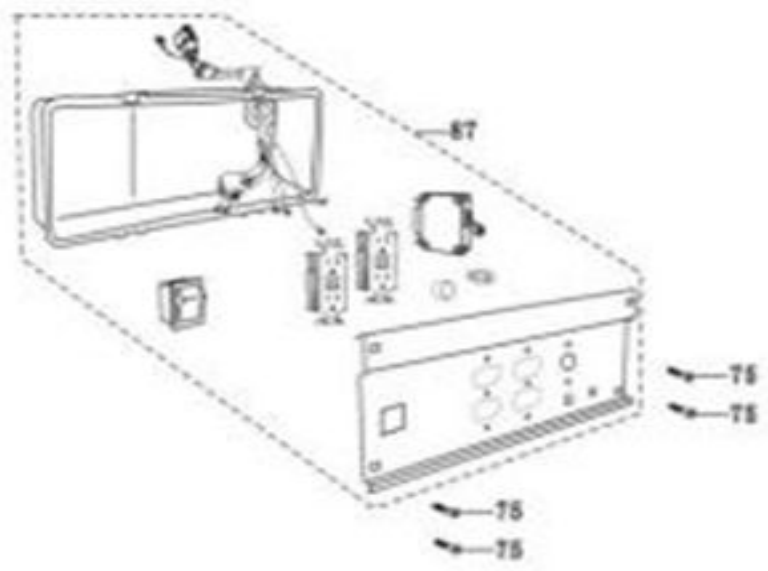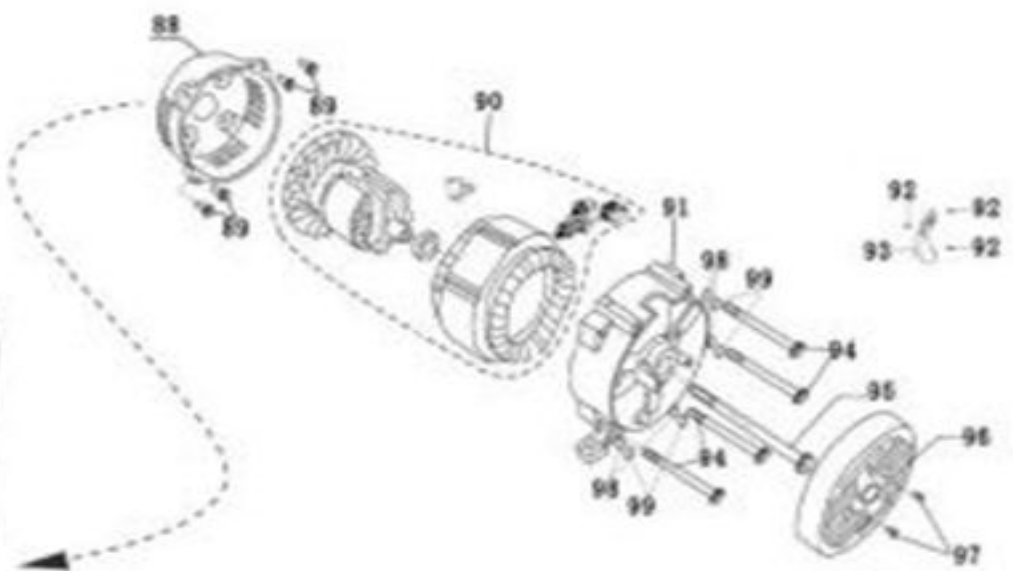

ENERGY STORM

ES-2000 INVERTER GENERATOR

S/N	Part No.	Description	Qty
1	11110-A0430-0001	Crankcase	1
2	11120-A0410-0002	Oil seal 17X30X6 ,crankshaft	1
3	11115-A0710-0001	Drian plug	2
4	11116-A0710-0001	Washer	2
5	T152-0019	Bolt M6X12	11
6	32141-IW124-0001	Flow guard	1
7	26112-A0410-0001	Keeper,sway bar	1
8	26113-A0410-0001	Washer,sway bar	1
9	26111-A0410-0001	sway bar	1
10	11130-A0410-0001	Oil seal,sway bar	1
11	11113-A0710-0001	Set pin ϕ 8X14	2
12	11114-A0430-0001	Gasket,crankcase	1
13	11211-A0430-0001	Crankcase cover	1
14	11120-A0410-0002	Oil seal 17X30X6 ,crankshaft	1
15	15510-A0710-0001	Dipstick sub-assy	1
16	15610-A0710-0001	Oil plug sub-assy	1
17	25100-A0410-0001	Driven gear sub-assy,governor	1
18	T910-0006	Bearing 6203	1
19	GB/T5789-86	Bolt M6X28	6
20	T230-0020	Bolt M6 \times 20	2
21	18215-BT2Y0-0001	Gasket exhaust port	1
22	18100-BT2Y0-0003	Exhaust muffler	1
23	13400-A0410-0001	Piston ring set	1
24	13313-A0410-0001	Circlip,piston pin	2
25	13311-A0410-0001	Piston	2
26	13312-A0410-0001	Piston pin	1

S/N	Part No.	Description	Qty
27	13120-A0410-0001	Connecting rod	1
28	13110-A0430-0004	Crankshaft sub-assy	1
29	14100-A0410-0001	Camshaft	1
30	14114-A0410-0001	Washer,camshaft	1
31	17113-A0410-0001	Gasket,air cleaner	1
32	17100-A0430-0001	Housing,air cleaner	1
33	17219-A0430-0001	Gasket,intake port	1
34	16120-A0430-0001	Connecting block	1
35	16113-A0430-0001	Gasket, carburetor	1
36	16100-A0430-0001	Carburetor assy	1
37	T311-0002	Nut M6	1
38	26116-A0710-0001	Lock bolt	1
39	26200-A0430-0001	Mount, governor	1
40	26114-A0430-0001	Governor arm	1
41	26118-A0410-0001	Assistant spring, governor	1
42	26115-A0410-0001	Pull-rod, governor	1
43	26117-A0410-0001	Return spring	1
44	GB/T16674	Bolt M6 \times 8	3
45	23100-BT2Y0-0005	Recoil starter	1
46	192110-BT2Y0-0005	Fan hood sub-assy	1
47	23317-A0410-0001	Nut M12 \times 1.25	1
48	23316-A0430-0001	Starting flange	1
49	19111-A0410-0001	Fan, flywheel	1
50	23300-A0430-0001	Flywheel	1

S/N	Part No.	Description	Qty
51	GB/T5787-86	Bolt M6×28	2
52	27200-A0430-0001	Ignition coil sub-assy	1
53	12120-A0430-0001	Gasket, cylinder head	1
54	12100-A0430-0001	Cylinder head Assy	1
55	17218-A0410-0001	Stud	2
56	27100-A0410-0004	Spark plug 255	1
57	12118-A0430-0003	Bolt	4
58	14411-A0430-0001	Intake valve	1
59	14412-A0430-0001	Exhaust valve	1
60	14414-A0430-0001	Valve spring	2
61	14415-A0410-0001	Spring seat, valve	2
62	14416-A0430-0001	Cap	2
63	14315-A0430-0001	Tappet	2
64	14210-A0430-0001	Pusher	2
65	14220-A0430-0001	Pusher guide	1
66	14310-A0430-0001	Valve rocker Assy	1
67	12200-A0430-0001	Cylinder head cover Assy	1
68	19143-A0430-0001	Air duck	1
69	12120-A0430-0001	Gasket, cylinder head cover	1
70	16630-A0710-0001	Outing the oil deals with contact	1
71	16622-A0710-0005	Pipe clamp	1
72	16621-A0810-0006	Pipeline	4
73	16911-BT222-0001	Rubber	4

S/N	Part No.	Description	Qty
74	31511-A1713-0001	Red washer	4
75	60287-H1114-0001	Bolt M6×16	5
76	16510-BT222-0025	Fuel tank	1
77	16610-A0710-0001	Filter cup	1
78	16400-A0710-0006	Fuel filer cap	1
79	32414-BT222-0001	Connect mat	2
80	32100-BT2Y0-0003	Frame sub-assy	1
81	12118-A1710-0002	Bolt, M8×50	2
82	GB/T5789-86	Bolt, M8×32	2
83	41135-C2310-0001	Nut, M8	4
84	60618-J1114-0001	Nut, M6	4
85	26116-A1310-0001	Bolt, M6×25	4
86	32413-BT222-0001	Rubber mat	4
87	31200-BT222-0080	Control panel assy	1
88	11211-A0430-0001	Generator cover, Right	1
89	GB/T5789-86	Bolt M8×20	4
90	31100-B3210-0005	Stator Rotor Assy	1
91	31151-B9130-0001	Generator stay	1
92	GB/T819	BoltM5×12	4
93	31140-B9130-0001	Voltage regulator	1
94	31112-B7130-0001	Stator Assy bolt	4
95	31125-BT2Y0-0001	Rotor Assy bolt	1
96	31152-B9130-0007	Generator end cover	1
97	31153-A0410-0001	Bolt M5×10	2
98	T411-0002	Rubber. M6	4
99	T441-0002	Rubber. M6	4