

GENERATOR BLOCK

GENERATOR GROUNDING

ENGINE BLOCK

VOLTAGE SELECTOR


	3-2/4	5-6/8	11-10/12	1-2/4	5-5/8	9-10/12
120V	ON	ON	ON	OFF	OFF	OFF
240V	OFF	OFF	OFF	ON	ON	ON

ENG. SW.

	KG	E	ST	INT	G	FS
OFF	<input type="checkbox"/>	<input type="checkbox"/>			<input type="checkbox"/>	<input type="checkbox"/>
ON						
START			<input type="checkbox"/>			

WIRE

BL	Black	R	Red
Y	Yellow	W	White
BL	Blue	Br	Brown
G	Green	OR	Orange

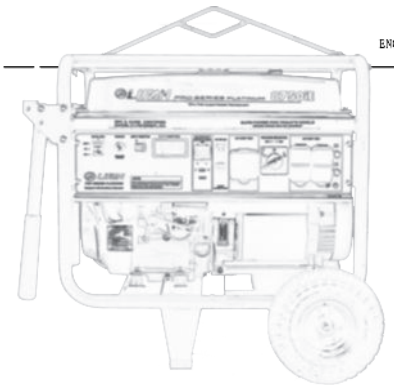

LF8750iEPL-RV Generator Wiring Diagram

FOR DOWNLOADABLE MANUALS, WIRING DIAGRAMS, ONLINE WARRANTY REGISTRATION, PARTS ORDERS AND MORE, VISIT

LIFANPOWERUSA.COM